


BOOM CONNECTORS


Elastec booms can be supplied with a choice of connectors for rapid coupling of sections. As standard, our booms are fitted with left handed Universal Slide type connectors that comply with ASTM standard F2438.

The Universal Slide connector design will accommodate other connectors with the same orientation.


We can also supply "Z" connectors that conform to ASTM F962. Note this is an old standard and has been superseded by F2438.

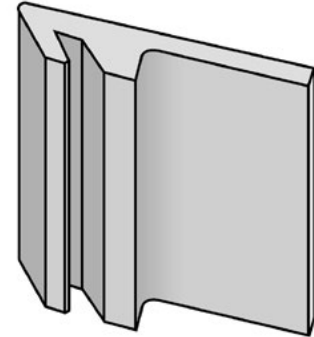


Right Hand (View from Top)

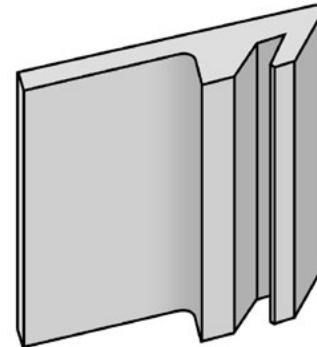


Left Hand (View from Top)

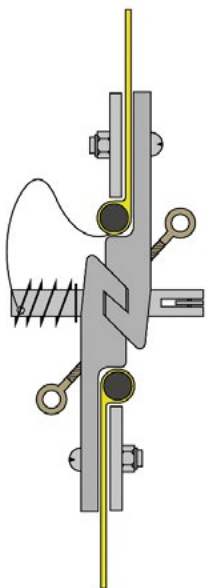


"Z" Connector
to
"Z" Connector

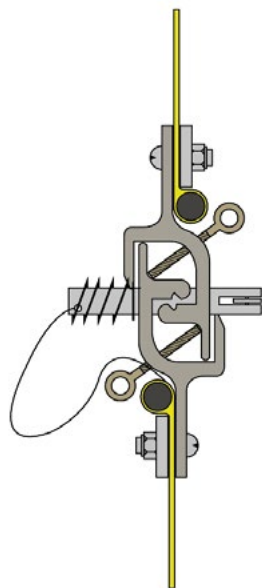

Universal Slide (Mini)
Connector
to Universal Slide (Mini)
Connector

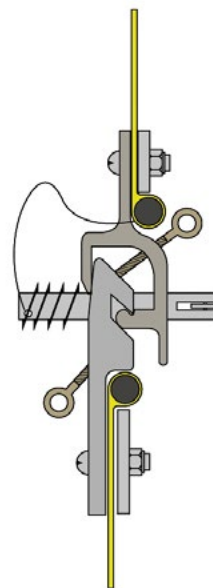

Universal Slide (Mini) Connector
to
"Z" Connector

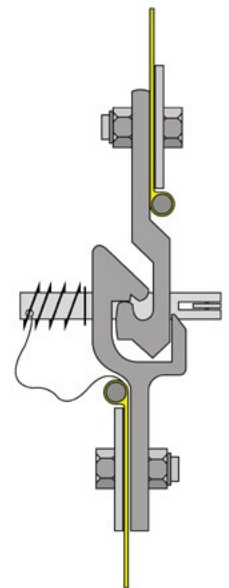

Unicon Connector
to
Universal Slide (Bulk)
Connector



Tidal Compensator

The ELASTEC Tidal Compensator is used when boom is deployed in tidal waters or any waterway with fluctuating levels. The connector rolls up and down an installed beam to ensure containment boom is always in the correct position.



Tow Bridle with Bullet Float

The ELASTEC Tow Bridle with Bullet Float aides in towing containment boom to ensure the lead connector remains upright. It also keeps tow bridles from sinking during maintenance or connection operations.



Three Way Connector

The ELASTEC Three Way Connector provides the ability to intersect three different boom sections.



Magnetic Hull Connector

The ELASTEC Magnetic Hull Connector provides the ability to quickly attach boom to the hull of a ship or quay wall.